 


.....	1
.....	1
.....	4


, BioStar 2, , “Live, Video”

BioStar 2.6.2


가




1. (VIDEO)
2. NVR 가(Add New NVR)
3. 가 NVR

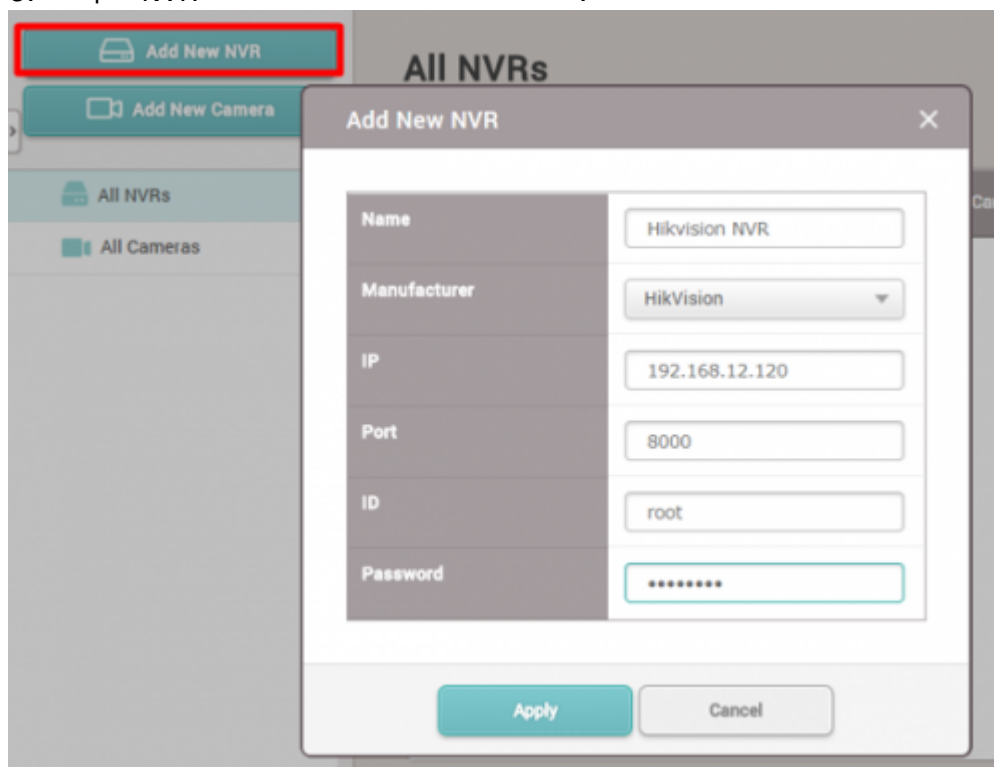


4. (Apply)
5. 가(Add New Camera)
6. 가 NVR (Next)

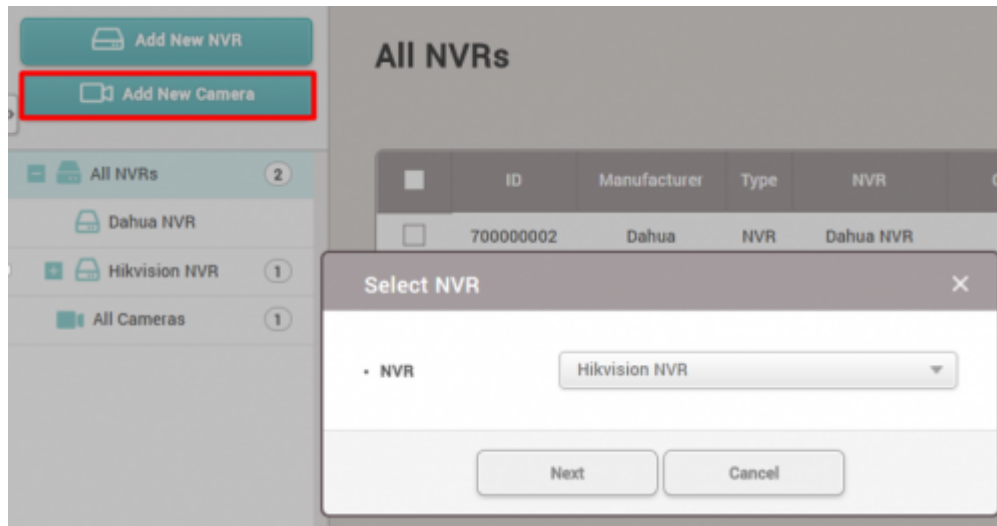

7. 가 + 가(+ Add)

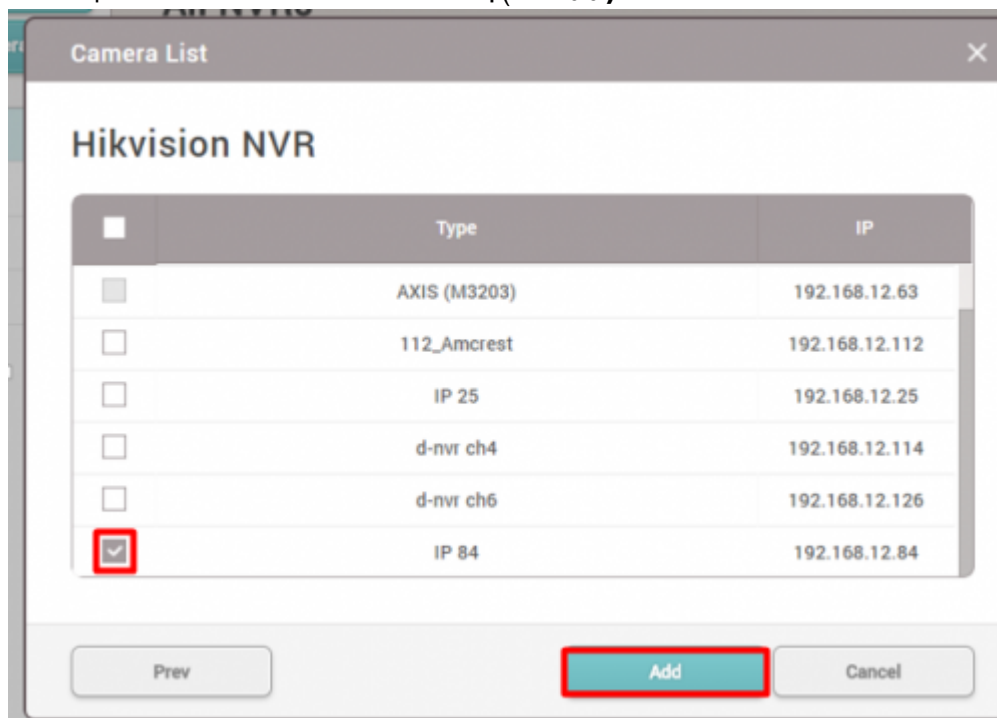

8. (All Cameras)

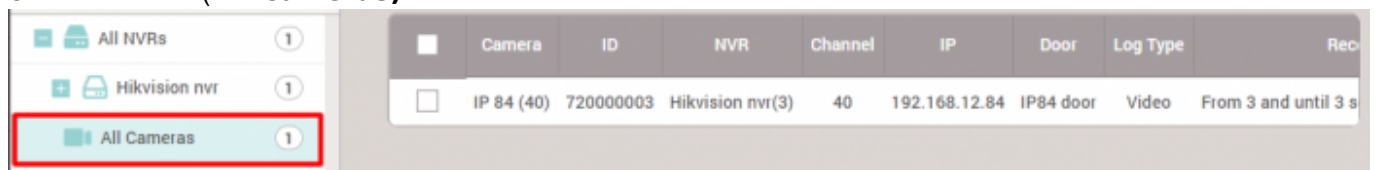

9. (Door) + 가(+ Add)

Configuration

Video Log Setting

Start recording

3

secs before an event

End recording

3

secs after an event

Event

Door

IP84 door

Event

Event	Schedule	
Device Disconnection Detected	Always	<div>+ Add</div>

Apply

Cancel

10. (Apply)

11. (MONITORING)

(Live Video View)

USER

DEVICE

DOOR

ELEVATOR

ZONE

ACCESS CONTROL

MONITORING

Real-time Log

Live Video View

Device Status


Door Status

Floor Status

Zone Status


Alert History

12.

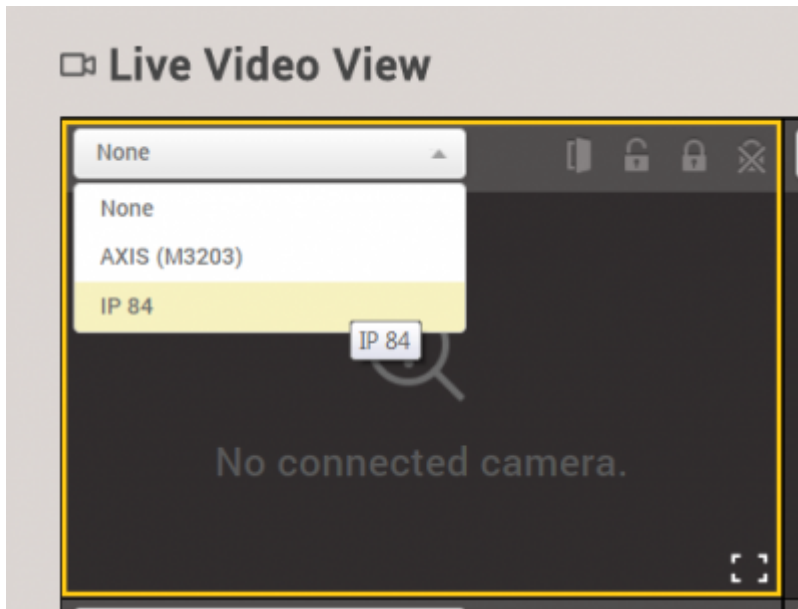

14.


가

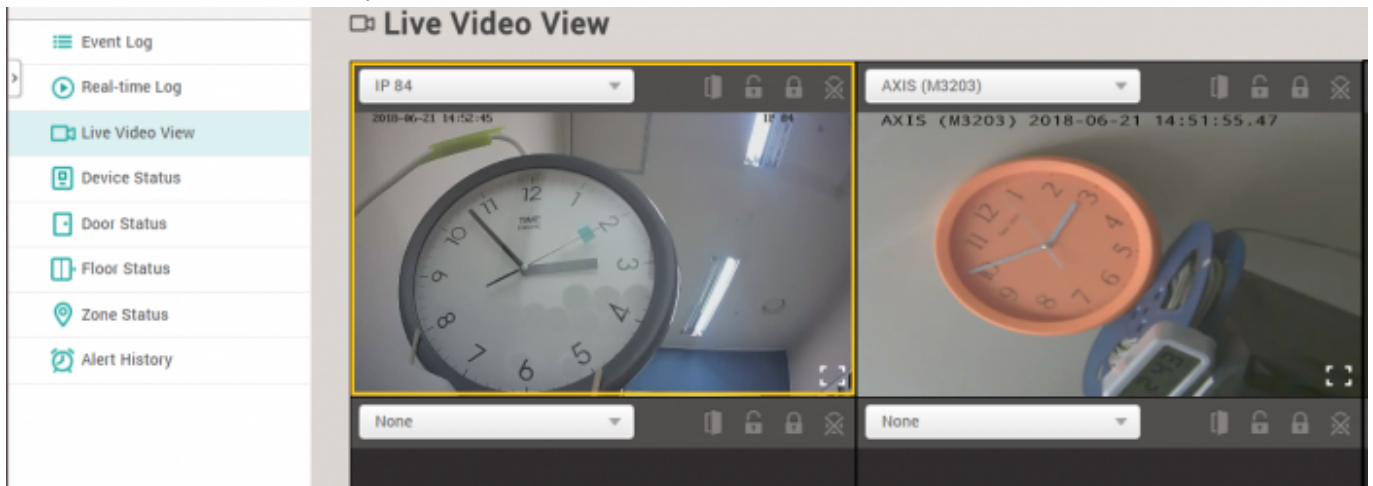

15.

. ( , , , ,

)

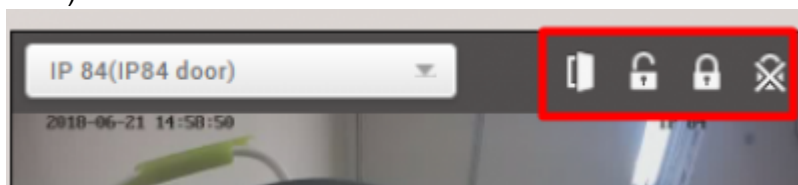

2x\_sysconfig\_live\_video.mp4

From:  
<http://kb.supremainc.com/knowledge/> -

Permanent link:  
[http://kb.supremainc.com/knowledge/doku.php?id=ko:how\\_to\\_configure\\_live\\_video\\_view](http://kb.supremainc.com/knowledge/doku.php?id=ko:how_to_configure_live_video_view)

Last update: **2018/08/02 16:33**

