

SDK API 1

initialize 1

 1

run 1

 1

getVersion 1

 2

 2

setCardType 2

 2

 2

connectFtpServer 2

 2

 3

disconnectFtpServer 3

 3

getFirmwareFileList 3

 3

 3

upgradeFirmware 4

 4

 4

SDK API

initialize

SDK

```
void initialize(Context context, DeviceListener listener)
```

- context : android application context.
- listener : 가 .

가 SDK가 가 .

run

SDK

```
int run()
```

SUCCESS 가 .

SDK 가 .

getVersion

SDK / Firmware 가 .

```
int getVersion(Version version)
```

- version : SDK / Firmware

SUCCESS 가 .

setCardType

RF .

```
int setCardType(int cardType)
```

- cardType : RF

1	HIGH_FREQUENCY
2	HIGH_FREQUENCY_ICLASS
3	LOW_FREQUENCY
4	LOW_FREQUENCY_PROX

SUCCESS 가 .

connectFtpServer

FTP .

```
int connectFtpServer(FirmwareOption option)
```

- option:

SUCCESS

가

.

API FTP

FTP

.

disconnectFtpServer

FTP

```
int disconnectFtpServer()
```

SUCCESS

가

.

API FTP

FTP

.

getFirmwareFileList

FTP

```
int getFirmwareFileList(ArrayList<String> fileList)
```

- fileList:

SUCCESS

가

FTP

API FTP

upgradeFirmware

```
int upgradeFirmware(FirmwareOption option)
```

- option:

SUCCESS

가

FTP

API FTP

From:

[http://kb.supremainc.com/svpsdk./](http://kb.supremainc.com/svpsdk/) - **SVP Android SDK**

Permanent link:

http://kb.supremainc.com/svpsdk./doku.php?id=ko:sdk_api&rev=1543814241

Last update: **2018/12/03 14:17**