

SDK API 1

initialize 1

 1

run 1

 1

getVersion 2

 2

 2

setCardType 2

 2

 2

connectFtpServer 3

 3

 3

disconnectFtpServer 3

 3

getFirmwareFileList 4

 4

 4

upgradeFirmware 4

 4

 4

SDK API

initialize

SDK

```
void initialize(Context context, DeviceListener listener)
```

- context : android application context.
- listener : 가

DeviceListener

가 SDK가
가

run

SDK

```
int run()
```

SUCCESS 가

SDK 가

getVersion

SDK / Firmware 가 .

```
int getVersion(Version version)
```

- version : SDK / Firmware

Version

SUCCESS 가 .

setCardType

RF .

```
int setCardType(int cardType)
```

- cardType : RF

| | |
|---|-----------------------|
| | |
| 1 | HIGH_FREQUENCY |
| 2 | HIGH_FREQUENCY_ICLASS |
| 3 | LOW_FREQUENCY |
| 4 | LOW_FREQUENCY_PROX |

SUCCESS 가 .

connectFtpServer

FTP

```
int connectFtpServer(FirmwareOption option)
```

- option:

FirmwareOption

SUCCESS

가

API FTP

FTP

disconnectFtpServer

FTP

```
int disconnectFtpServer()
```

SUCCESS

가

API FTP

FTP

getFirmwareFileList

FTP

```
int getFirmwareFileList(ArrayList<String> fileList)
```

- fileList:

SUCCESS

가

API FTP FTP

upgradeFirmware

```
int upgradeFirmware(FirmwareOption option)
```

- option:

FirmwareOption

SUCCESS

가

API FTP FTP

From:

<http://kb.supremainc.com/svpsdk/> - **SVP Android SDK**

Permanent link:

http://kb.supremainc.com/svpsdk./doku.php?id=ko:sdk_api&rev=1543821756

Last update: **2018/12/03 16:22**