

Table of Contents

BS2_GetAllDeviceZone	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	1
See Also	2

BS2_GetAllDeviceZone

Retrieves all Ethernet zones.

Supported devices

BioStation 2 (1.5.0 only)
BioStatioin A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_GetAllDeviceZone(void* context, BS2_DEVICE_ID deviceId,
BS2DeviceZone** deviceZoneObj, uint32_t* numDeviceZone);
```

[See BS2DeviceZone Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *deviceZoneObj* : Device zone list pointer
- [Out] *numDeviceZone* : Number of Device zones

NOTE

The *zoneObj* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZone](#)

[BS2_SetDeviceZone](#)

[BS2_RemoveDeviceZone](#)

[BS2_RemoveAllDeviceZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getalldevicezone

Last update: **2018/03/22 10:59**