

Table of Contents

BS2_GetDesFireCardConfigEx	1
Declaration	1
Paramter	1
Return Value	1
See Also	1

[Configuration API](#) > [BS2_GetDesFireCardConfigEx](#)

BS2_GetDesFireCardConfigEx

[+ V2.6.4] Retrieves DesFire advanced configuration from the device.

Declaration

```
#include "BS_API.h"

int BS2_GetDesFireCardConfigEx(void* context, uint32_t deviceId,
BS2DesFireCardConfigEx* config);
```

[See Structure BS2DesFireCardConfigEx](#)

Paramter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *config* : Pointer of DesFire advanced setting

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_SetDesFireCardConfigEx](#)

From:
<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:
http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getdesfirecardconfigex&rev=1581988044

Last update: **2020/02/18 10:07**