

Table of Contents

BS2_GetRS485ConfigEx	1
Declaration	1
Parameter	1
Return Value	1

[Configuration API](#) > [BS2_GetRS485ConfigEx](#)

BS2_GetRS485ConfigEx

In case of Corestation, retrieves RS-485 network settings from the device.

Declaration

```
#include "BS_API.h"

int BS2_GetRS485ConfigEx(void* context, uint32_t deviceId, BS2Rs485ConfigEX* config);
```

[See BS2Rs485ConfigEX Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *config* : RS-485 network configurations pointer

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

From:
<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:
https://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_getrs485configex&rev=1504509845

Last update: **2017/09/04 16:24**