

# Table of Contents

|   |   |
|---|---|
| <b>BS2_RemoveAllDeviceZoneAGEntranceLimit</b> ..... | 1 |
| Declaration .....                                   | 1 |
| Parameter .....                                     | 1 |
| Return Value .....                                  | 1 |
| See Also .....                                      | 1 |

[Zone Control API](#) > [BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

---

## BS2\_RemoveAllDeviceZoneAGEntranceLimit

Removes all Ethernet access group entrance limit

### Declaration

```
#include "BS_API.h"

int BS2_RemoveAllDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId);
```

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetAccessGroupEntranceLimit](#)  
[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)  
[BS2\\_SetDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2\\_removealldevicezoneagentrancelimit&rev=1504685439](http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_removealldevicezoneagentrancelimit&rev=1504685439)

Last update: **2017/09/06 17:10**