

# Table of Contents

<b>BS2_RemoveDeviceZoneAGEntranceLimit</b> .....	1
Supported devices .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_RemoveDeviceZoneAGEntranceLimit](#)

---

## BS2\_RemoveDeviceZoneAGEntranceLimit

Removes selected Ethernet access group entrance limit.

### Supported devices

BioStation 2 (1.5.0 only)  
BioStatioin A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)

### Declaration

```
#include "BS_API.h"

int BS2_RemoveDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId, const BS2_ZONE_ID* Ids, uint32_t IdCount);
```

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of Device zone IDs to remove
- [In] *IdCount* : Number of Device zones to remove

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetAccessGroupEntranceLimit](#)  
[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)  
[BS2\\_SetDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_removedevicezoneagentrancelimit](http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_removedevicezoneagentrancelimit)

Last update: **2018/03/22 10:56**