

Table of Contents

BS2_RemoveIntrusionAlarmZone	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_RemoveIntrusionAlarmZone](#)

BS2_RemoveIntrusionAlarmZone

Removes selected Intrusion Alarm zones.

Declaration

```
#include "BS_API.h"

int BS2_RemoveIntrusionAlarmZone(void* context, uint32_t deviceId, uint32_t* zoneIds, uint32_t zoneIdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zoneIds* : List of Intrusion alarm zone IDs to remove
- [In] *zoneIdCount* : Number of Intrusion alarm zone id list

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetIntrusionAlarmZone](#)
[BS2_GetIntrusionAlarmZoneStatus](#)
[BS2_GetAllIntrusionAlarmZoneStatus](#)
[BS2_SetIntrusionAlarmZone](#)
[BS2_SetIntrusionAlarmZoneAlarm](#)
[BS2_RemoveAllIntrusionAlarmZone](#)
[BS2_SetIntrusionAlarmZoneArm](#)

From:
<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:
http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_removeintrusionalarmzone&rev=1504589374

Last update: **2017/09/05 14:29**