

Table of Contents

BS2_SetCustomCardConfig

Declaration

Parameter

Return Value

See Also

Sample Code(C++)

Sample Code(C#)

1

1

1

1

1

1

5

BS2_SetCustomCardConfig

[+ 2.9.4] Stores Custom smart card settings.

Warning

To use the custom smart card function, you must disable suprema smart card modes and enable custom smart card modes in useCardOperationMask of [BS2SystemConfig](#).

Declaration

```
#include "BS_API.h"

int BS2_SetCustomCardConfig(void* context, uint32_t deviceId, const
BS2CustomCardConfig* config);
```

[See to structure BS2CustomCardConfig](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device Identifier
- [Out] *config* : Pointer to set Custom smart card information

Return Value

If successfully done, BS_SDK_SUCCESS will be returned. If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetCustomCardConfig](#)

Sample Code(C++)

sample_setcustomcardconfig.cpp

```
ConfigControl cc(context);
BS2CustomCardConfig config = { , };

BS2_DEVICE_ID id = Utility::getSelectedDeviceID(device);
int sdkResult = cc.getCustomCardConfig(id, config);
if (BS_SDK_SUCCESS != sdkResult)
    return sdkResult;

string msg = "Please enter a data type of cards. (0: Binary, 1:
ASCII, 2: UTF16, 3: BCS)";
config.dataType =
(BS2_CARD_DATA_TYPE)Utility::getInput<uint32_t>(msg);
config.useSecondaryKey = Utility::isYes("Do you want to use
secondary key?");

ostreamstream oss;

if (Utility::isYes("Do you want to change mifare custom card
settings?"))
{
    memset(&config.mifare.primaryKey, 0x0,
sizeof(config.mifare.primaryKey));
    oss << "Please enter the hexadecimal " <<
sizeof(config.mifare.primaryKey) << "-bytes primary key for mifare
card." << endl;
    oss << " [Like 12 34 56 ... EF]" << endl;
    Utility::getLineHexString<uint8_t>(oss.str(),
config.mifare.primaryKey, sizeof(config.mifare.primaryKey));

    if (config.useSecondaryKey)
    {
        memset(&config.mifare.secondaryKey, 0x0,
sizeof(config.mifare.secondaryKey));
        oss.str("");
        oss << "Please enter the hexadecimal " <<
sizeof(config.mifare.secondaryKey) << "-bytes secondary key for mifare
card." << endl;
        oss << " [Like 12 34 56 ... EF]" << endl;
        Utility::getLineHexString<uint8_t>(oss.str(),
config.mifare.secondaryKey, sizeof(config.mifare.secondaryKey));
    }

    msg = "Please enter the start block index of mifare card.";
    config.mifare.startBlockIndex =
(uint16_t)Utility::getInput<uint32_t>(msg);
    msg = "Please enter the card data size of mifare card.";
    config.mifare.dataSize =
(uint8_t)Utility::getInput<uint32_t>(msg);
    msg = "Please enter the skip bytes of mifare card.;"
```

```
        config.mifare.skipBytes =
(uint8_t)Utility::getInput<uint32_t>(msg);
    }

    if (Utility::isYes("Do you want to change desfire custom card
settings?"))
    {
        memset(&config.desfire.primaryKey, 0x0,
sizeof(config.desfire.primaryKey));
        oss << "Please enter the hexadecimal " <<
sizeof(config.desfire.primaryKey) << "-bytes primary key for desfire
card." << endl;
        oss << " [Like 12 34 56 ... EF]" << endl;
        Utility::getLineHexString<uint8_t>(oss.str(),
config.desfire.primaryKey, sizeof(config.desfire.primaryKey));

        if (config.useSecondaryKey)
        {
            memset(&config.desfire.secondaryKey, 0x0,
sizeof(config.desfire.secondaryKey));
            oss.str("");
            oss << "Please enter the hexadecimal " <<
sizeof(config.desfire.secondaryKey) << "-bytes secondary key for
desfire card." << endl;
            oss << " [Like 12 34 56 ... EF]" << endl;
            Utility::getLineHexString<uint8_t>(oss.str(),
config.desfire.secondaryKey, sizeof(config.desfire.secondaryKey));
        }

        oss.str("");
        oss << "Please enter the hexadecimal " <<
sizeof(config.desfire.appID) << "-bytes appID for desfire card." <<
endl;
        oss << " [Like 12 34 EF]" << endl;
        Utility::getLineHexString<uint8_t>(oss.str(),
config.desfire.appID, sizeof(config.desfire.appID));

        msg = "Please enter the fileID for desfire card.";
        config.desfire.fileID =
(uint8_t)Utility::getInput<uint32_t>(msg);
        msg = "Please enter a encryption type for desfire card. (0:
DES/3DES, 1: AES)";
        config.desfire.encryptionType =
(uint8_t)Utility::getInput<uint32_t>(msg);
        msg = "Please enter a operation mode for desfire card. (0:
Legacy, 1: Advanced(AppLevelKey))";
        config.desfire.operationMode =
(uint8_t)Utility::getInput<uint32_t>(msg);
        msg = "Please enter the card data size of desfire card.";
        config.desfire.dataSize =
(uint8_t)Utility::getInput<uint32_t>(msg);
```

```
    msg = "Please enter the skip bytes of desfire card.";
    config.desfire.skipBytes =
(uint8_t)Utility::getInput<uint32_t>(msg);

    if (config.desfire.operationMode ==
DESFIRECARD_OPERATION_MODE_APPLEVELKEY)
    {
        memset(&config.desfire.desfireAppKey.appMasterKey, 0x0,
sizeof(config.desfire.desfireAppKey.appMasterKey));
        memset(&config.desfire.desfireAppKey.fileReadKey, 0x0,
sizeof(config.desfire.desfireAppKey.fileReadKey));
        memset(&config.desfire.desfireAppKey.fileWriteKey, 0x0,
sizeof(config.desfire.desfireAppKey.fileWriteKey));

        oss.str("");
        oss << "Please enter the hexadecimal " <<
sizeof(config.desfire.desfireAppKey.appMasterKey) << "-bytes
appMasterKey for desfire card." << endl;
        oss << " [Like 12 34 56 ... EF]" << endl;
        Utility::getLineHexString<uint8_t>(oss.str(),
config.desfire.desfireAppKey.appMasterKey,
sizeof(config.desfire.desfireAppKey.appMasterKey));

        oss.str("");
        oss << "Please enter the hexadecimal " <<
sizeof(config.desfire.desfireAppKey.fileReadKey) << "-bytes fileReadKey
for desfire card." << endl;
        oss << " [Like 12 34 56 ... EF]" << endl;
        Utility::getLineHexString<uint8_t>(oss.str(),
config.desfire.desfireAppKey.fileReadKey,
sizeof(config.desfire.desfireAppKey.fileReadKey));

        oss.str("");
        oss << "Please enter the hexadecimal " <<
sizeof(config.desfire.desfireAppKey.fileWriteKey) << "-bytes
fileWriteKey for desfire card." << endl;
        oss << " [Like 12 34 56 ... EF]" << endl;
        Utility::getLineHexString<uint8_t>(oss.str(),
config.desfire.desfireAppKey.fileWriteKey,
sizeof(config.desfire.desfireAppKey.fileWriteKey));

        msg = "Please enter the fileReadKeyNumber of desfire
card.";
        config.desfire.desfireAppKey.fileReadKeyNumber =
(uint8_t)Utility::getInput<uint32_t>(msg);
        msg = "Please enter the fileWriteKeyNumber of desfire
card.";
        config.desfire.desfireAppKey.fileWriteKeyNumber =
(uint8_t)Utility::getInput<uint32_t>(msg);
    }
}
```

```
msg = "Please enter a smart card byte order. (0: MSB, 1: LSB)";
config.smartCardByteOrder =
(BS2_CARD_BYTE_ORDER)Utility::getInput<uint32_t>(msg);
msg = "Please enter a formatID.";
config.formatID = (BS2_UID)Utility::getInput<uint32_t>(msg);

return cc.setCustomCardConfig(id, config);
```

Sample Code(C#)

[sample_setcustomcardconfig.cs](#)

```
BS2DeviceCapabilities capa;
if (!CommonControl.getDeviceCapabilities(sdkContext,
deviceID, out capa))
    return;

if (!Convert.ToBoolean(capa.functionExSupported &
(byte)BS2CapabilityFunctionExSupport.FUNCTIONEX_SUPPORT_CUSTOMSMARTCARD
))
{
    Console.WriteLine("Not supported function.");
    return;
}

BS2CustomCardConfig config;
Console.WriteLine("Try to get CustomCardConfig");
BS2ErrorCode result =
(BS2ErrorCode)API.BS2_GetCustomCardConfig(sdkContext, deviceID, out
config);
if (BS2ErrorCode.BS_SDK_SUCCESS != result)
    return;

Util.HighlightLine("Please enter a data type of cards. (0:
Binary, 1: ASCII, 2: UTF16, 3: BCS)", "data type");
Console.Write(">>>> ");
config.dataType = Util.GetInput((byte));

Util.HighlightLine("Do you want to use secondary key?",
"use secondary key");
Console.Write(">>>> ");
bool useSecondaryKey = Util.IsYes();
config.useSecondaryKey = Convert.ToByte(useSecondaryKey);

Util.HighlightLine("Do you want to change mifare custom
card settings? [Y/n]", "mifare custom card");
Console.Write(">>>> ");
```

```
        if (Util.IsYes())
        {
            int sizeOfKey = config.mifare.primaryKey.Length;
            Array.Clear(config.mifare.primaryKey, , sizeOfKey);
            string tempStr = String.Format("Please enter the
hexadecimal {0}-bytes primary key for mifare card. [KEY1-KEY2-...-
KEY6]", sizeOfKey);
            Util.HighlightLineMulti(tempStr, "primary key", "mifare
card");

            Console.Write(">>>> ");
            enterSmartcardKey(config.mifare.primaryKey);

            if (useSecondaryKey)
            {
                sizeOfKey = config.mifare.secondaryKey.Length;
                Array.Clear(config.mifare.secondaryKey, ,
sizeOfKey);

                tempStr = String.Format("Please enter the
hexadecimal {0}-bytes secondary key for mifare card. [KEY1-KEY2-...-
KEY6]", sizeOfKey);
                Util.HighlightLineMulti(tempStr, "secondary key",
"mifare card");

                Console.Write(">>>> ");
                enterSmartcardKey(config.mifare.secondaryKey);
            }

            Util.HighlightLineMulti("Please enter the start block
index of mifare card.", "start block index", "mifare card");
            Console.Write(">>>> ");
            config.mifare.startBlockIndex =
Util.GetInput((UInt16));

            Util.HighlightLineMulti("Please enter the card data
size of mifare card.", "card data size", "mifare card");
            Console.Write(">>>> ");
            config.mifare.dataSize = Util.GetInput((byte));

            Util.HighlightLineMulti("Please enter the skip bytes of
mifare card.", "skip bytes", "mifare card");
            Console.Write(">>>> ");
            config.mifare.skipBytes = Util.GetInput((byte));
        }

        Util.HighlightLine("Do you want to change desfire custom
card settings? [Y/n]", "desfire custom card");
        Console.Write(">>>> ");
        if (Util.IsYes())
        {
            Util.HighlightLineMulti("Please enter a operationMode
of desfire card. (0: Legacy, 1: Advanced(AppLevelKey))",
"operationMode", "desfire card");
```

```

        Console.WriteLine(">>>> ");
        config.desfire.operationMode = Util.GetInput((byte));

        string tempStr;
        int sizeOfKey;
        if (config.desfire.operationMode ==
Convert.ToByte(BS2DesfireCardOperation.BS2_DESFIRECARD_OPERATION_MODE_L
EGACY))
        {
            sizeOfKey = config.desfire.primaryKey.Length;
            Array.Clear(config.desfire.primaryKey, ,
sizeOfKey);

            tempStr = String.Format("Please enter the
hexadecimal {0}-bytes primary key for desfire card. [KEY1-KEY2-....-
KEY6]", sizeOfKey);
            Util.HighlightLineMulti(tempStr, "primary key",
"desfire card");
            Console.WriteLine(">>>> ");
            enterSmartcardKey(config.desfire.primaryKey);

            if (useSecondaryKey)
            {
                sizeOfKey = config.desfire.secondaryKey.Length;
                Array.Clear(config.desfire.secondaryKey, ,
sizeOfKey);

                tempStr = String.Format("Please enter the
hexadecimal {0}-bytes secondary key for desfire card. [KEY1-KEY2-....-
KEY6]", sizeOfKey);
                Util.HighlightLineMulti(tempStr, "secondary
key", "desfire card");
                Console.WriteLine(">>>> ");
                enterSmartcardKey(config.desfire.secondaryKey);
            }
        }
        else //
BS2DesfireCardOperation.BS2_DESFIRECARD_OPERATION_MODE_APPLEVELKEY
        {
            int sizeOfAppMasterKey =
config.desfire.desfireAppKey.appMasterKey.Length;
            int sizeOfFileReadKey =
config.desfire.desfireAppKey.fileReadKey.Length;
            int sizeOfFileWriteKey =
config.desfire.desfireAppKey.fileWriteKey.Length;
            Array.Clear(config.desfire.desfireAppKey.appMasterKey, ,
sizeOfAppMasterKey);
            Array.Clear(config.desfire.desfireAppKey.fileReadKey, ,
sizeOfFileReadKey);
            Array.Clear(config.desfire.desfireAppKey.fileWriteKey, ,
sizeOfFileWriteKey);

            tempStr = String.Format("Please enter the

```

```

hexadecimal {0}-bytes appMasterKey for desfire card. [KEY1-KEY2-...-KEY16]", sizeofAppMasterKey);
        Util.HighlightLineMulti(tempStr, "appMasterKey",
"desfire card");
        Console.WriteLine(">>>> ");
enterSmartcardKey(config.desfire.desfireAppKey.appMasterKey);

        tempStr = String.Format("Please enter the
hexadecimal {0}-bytes fileReadKey for desfire card. [KEY1-KEY2-...-KEY16]", sizeofFileReadKey);
        Util.HighlightLineMulti(tempStr, "fileReadKey",
"desfire card");
        Console.WriteLine(">>>> ");
enterSmartcardKey(config.desfire.desfireAppKey.fileReadKey);

        Util.HighlightLineMulti("Please enter the
fileReadKeyNumber of desfire card.", "fileReadKeyNumber", "desfire
card");
        Console.WriteLine(">>>> ");
        config.desfire.desfireAppKey.fileReadKeyNumber =
Util.GetInput((byte));
    }

    sizeofKey = config.desfire.appID.Length;
    Array.Clear(config.desfire.appID, , sizeofKey);
    tempStr = String.Format("Please enter the hexadecimal
{0}-bytes appID for desfire card. [KEY1-KEY2-...-KEY6]", sizeofKey);
    Util.HighlightLineMulti(tempStr, "appID", "desfire
card");

    Console.WriteLine(">>>> ");
    enterSmartcardKey(config.desfire.appID);

    Util.HighlightLineMulti("Please enter the fileID of
desfire card.", "fileID", "desfire card");
    Console.WriteLine(">>>> ");
    config.desfire.fileID = Util.GetInput((byte));

    Util.HighlightLineMulti("Please enter a encryptionType
of desfire card. (0: DES/3DES, 1: AES)", "encryptionType", "desfire
card");
    Console.WriteLine(">>>> ");
    config.desfire.encryptionType = Util.GetInput((byte));

    Util.HighlightLineMulti("Please enter the card data
size of desfire card.", "card data size", "desfire card");
    Console.WriteLine(">>>> ");
    config.desfire.dataSize = Util.GetInput((byte));

    Util.HighlightLineMulti("Please enter the skip bytes of
desfire card.", "skip bytes", "desfire card");
    Console.WriteLine(">>>> ");

```

```

        config.desfire.skipBytes = Util.GetInput((byte));
    }

    Util.HighlightLine("Please enter a smart card byte order.
(0: MSB, 1: LSB)", "smart card byte order");
    Console.WriteLine(">>>> ");
    config.smartCardByteOrder = Util.GetInput((byte));

    Util.HighlightLine("Please enter a formatID.", "formatID");
    Console.WriteLine(">>>> ");
    config.formatID = Util.GetInput((UInt32));

    Console.WriteLine("Trying to set CustomCardConfig.");
    result =
(BS2ErrorCode)API.BS2_SetCustomCardConfig(sdkContext, deviceID, ref
config);
    if (result != BS2ErrorCode.BS_SDK_SUCCESS)
        Console.WriteLine("Got error({0}).", result);
    else
        Console.WriteLine("Card config set success");

    Util.HighlightLineMulti("To use the custom smart card
function, you must turn off the Suprema smart card function. Do you
want to change the card operation mode? [Y/n]",
        "turn off the Suprema smart card function", "change the
card operation mode?");
    Console.WriteLine(">>>> ");
    if (Util.IsYes())
    {
        BS2SystemConfig sysConfig;
        result =
(BS2ErrorCode)API.BS2_GetSystemConfig(sdkContext, deviceID, out
sysConfig);
        if (result != BS2ErrorCode.BS_SDK_SUCCESS)
        {
            Console.WriteLine("Got error({0}).", result);
        }

        UInt32 preMask = sysConfig.useCardOperationMask;

        // Turn off Suprema smart card
        sysConfig.useCardOperationMask &=
~(UInt32)BS2SystemConfigCardOperationMask.CARD_OPERATION_MASK_CLASSIC_P
LUS;

        sysConfig.useCardOperationMask &=
~(UInt32)BS2SystemConfigCardOperationMask.CARD_OPERATION_MASK_DESFIRE_E
V1;

        sysConfig.useCardOperationMask &=
~(UInt32)BS2SystemConfigCardOperationMask.CARD_OPERATION_MASK_SR_SE;
        sysConfig.useCardOperationMask &=
~(UInt32)BS2SystemConfigCardOperationMask.CARD_OPERATION_MASK_SEOS;
    }

```

```
// Turn on Custom smart card
sysConfig.useCardOperationMask |=
(UInt32)BS2SystemConfigCardOperationMask.CARD_OPERATION_MASK_CUSTOM_CLASSIC_PLUS;

sysConfig.useCardOperationMask |=
(UInt32)BS2SystemConfigCardOperationMask.CARD_OPERATION_MASK_CUSTOM_DESFIRE_EV1;

// Apply
sysConfig.useCardOperationMask |=
(UInt32)BS2SystemConfigCardOperationMask.CARD_OPERATION_USE;

result =
(BS2ErrorCode)API.BS2_SetSystemConfig(sdkContext, deviceID, ref
sysConfig);
if (result != BS2ErrorCode.BS_SDK_SUCCESS)
    Console.WriteLine("Card operation mode update
failed ({0}).", result);
else
    Console.WriteLine("Card operation mode was changed
0x{0:x8} => 0x{1:x8}", preMask, sysConfig.useCardOperationMask);
}
```

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setcustomcardconfig&rev=1693484233

Last update: **2023/08/31 21:17**