

Table of Contents

| | |
|-------------------------------------|---|
| BS2_SetDeviceZoneAlarm | 1 |
| Supported devices | 1 |
| Declaration | 1 |
| Parameter | 1 |
| Return Value | 1 |
| See Also | 1 |

[Zone Control API](#) > [BS2_SetDeviceZoneAlarm](#)

BS2_SetDeviceZoneAlarm

Configures the alarm status of the Ethernet zone.

Supported devices

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneAlarm(void* context, BS2_DEVICE_ID deviceId, uint8_t
alarmed, BS2_ZONE_ID* zoneIds, uint32_t zoneIdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *alarmed* : Whether the alarm has been triggered or not
- [In] *zoneIds* : List of Device zone IDs
- [In] *zoneIdCount* : Number of Device zone IDs

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZone](#)
[BS2_GetAllDeviceZone](#)
[BS2_SetDeviceZone](#)
[BS2_RemoveDeviceZone](#)
[BS2_RemoveIntrusionAlarmZone](#)
[BS2_RemoveAllDeviceZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdevicezonealarm

Last update: **2018/03/22 10:58**