

# Table of Contents

<b>BS2_SetLiftLockUnlockZone</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_SetLiftLockUnlockZone](#)

---

## BS2\_SetLiftLockUnlockZone

[+ 2.7.0] Configures a Lift Lock/Unlock zone.

### Declaration

```
#include "BS_API.h"

int BS2_SetLiftLockUnlockZone(void* context, uint32_t deviceId,
BS2LiftLockUnlockZone* zones, uint32_t zoneCount);
```

[See BS2LiftLockUnlockZone Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zones* : Lift lock/unlock zone list
- [In] *zoneCount* : Number of Lift lock/unlock zone list

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetLiftLockUnlockZone](#)  
[BS2\\_GetAllLiftLockUnlockZone](#)  
[BS2\\_GetLiftLockUnlockZoneStatus](#)  
[BS2\\_GetAllLiftLockUnlockZoneStatus](#)  
[BS2\\_SetLiftLockUnlockZoneAlarm](#)  
[BS2\\_RemoveLiftLockUnlockZone](#)  
[BS2\\_RemoveAllLiftLockUnlockZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2\\_setliftlockunlockzone](http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_setliftlockunlockzone)

Last update: **2020/07/29 11:28**