

BS2_GetSlaveExDevice 1
..... 1
..... 1
..... 1
..... 1

BS2_GetSlaveExDevice

가 CoreStation


RS485

```
#include "BS_API.h"

int BS2_GetSlaveExDevice(void* context, uint32_t deviceId, uint32_t
channelPort, BS2Rs485SlaveDeviceEX** slaveDevices, uint32_t* outchannelPort,
uint32_t* slaveDeviceCount);
```

[BS2Rs485SlaveExDeviceEX](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *channelPort* : channel port
- [Out] *slaveDevices* : slave device
- [Out] *outchannelPort* : Slave device channel port
- [Out] *slaveDeviceCount* : slave device

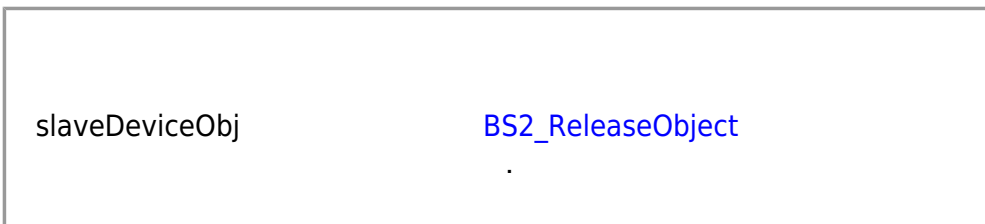

BS_SDK_SUCCESS

, 가

[BS2_SetSlaveExDevice](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_getslaveexdevice

Last update: **2017/08/29 08:26**