

BS2_ReleaseFloor 1
..... 1
..... 1
..... 1
..... 1

BS2_ReleaseFloor

Floor

```
#include "BS_API.h"

int BS2_ReleaseFloor(void* context, uint32_t deviceId, BS2_FLOOR_FLAG flag,
BS2_LIFT_ID liftID, uint16_t* floorIndexs, uint8_t floorIndexCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *flag* : Floor
- [In] *liftID* : lift ID
- [In] *floorIndexs* : floor Index
- [In] *floorIndexCount* : floor Index

BS_SDK_SUCCESS , 가

- BS2_GetLift
- BS2_GetAllLift
- BS2_GetLiftStatus
- BS2_GetAllLiftStatus
- BS2_SetLift
- BS2_SetLiftAlarm
- BS2_RemoveLift
- BS2_RemoveAllLift
- BS2_ActivateFloor
- BS2_DeActivateFloor

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_releasefloor

Last update: **2017/06/28 11:41**