

**BS2\_SetDeviceZone** ..... 1  
    ..... 1  
    ..... 1  
    ..... 1  
    ..... 1  
    ..... 1

[Zone Control API](#) > [BS2\\_SetDeviceZone](#)

---

## BS2\_SetDeviceZone

Ethernet

BioStation 2 (1.5.0 only)  
BioStation A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_SetDeviceZone(void* context, BS2_DEVICE_ID deviceId, const
BS2DeviceZone* deviceZones, uint32_t deviceZoneCount);
```

[BS2DeviceZone](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *deviceZones* : device zone
- [In] *deviceZoneCount* : device zone

BS\_SDK\_SUCCESS , 가

[BS2\\_GetDeviceZone](#)  
[BS2\\_GetAllDeviceZone](#)  
[BS2\\_RemoveDeviceZone](#)  
[BS2\\_RemoveAllDeviceZone](#)

## [BS2\\_SetDeviceZoneAlarm](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2\\_setdevicezone](http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_setdevicezone)

Last update: **2018/03/22 10:49**