

BS2_SetDeviceZoneAGEntranceLimit 1
..... 1
..... 1
..... 1
..... 1
..... 1

[Zone Control API](#) > [BS2_SetDeviceZoneAGEntranceLimit](#)

BS2_SetDeviceZoneAGEntranceLimit

Ethernet Access Group

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t
deviceZoneAGEntranceLimitCount);
```

[BS2DeviceZoneAGEntranceLimit](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *deviceZoneAGEntranceLimits* : device zone Access Group
- [In] *deviceZoneAGEntranceLimitCount* : device zone Access Group

BS_SDK_SUCCESS , 가

[BS2_GetAccessGroupEntranceLimit](#)
[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)

[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_setdevicezoneagentrancelimit

Last update: **2018/03/22 10:52**