

BS2_SetDeviceZoneMasterConfig 1
..... 1
..... 1
..... 1
..... 1
..... 1

[Zone Control API](#) > [BS2_SetDeviceZoneMasterConfig](#)

BS2_SetDeviceZoneMasterConfig

Ethernet master .

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_SetDeviceZoneMasterConfig(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneMasterConfig* config);
```

[BS2DeviceZoneMasterConfig](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *config* : zone master

BS_SDK_SUCCESS , 가

[BS2_GetDeviceZoneMasterConfig](#)
[BS2_RemoveDeviceZoneMasterConfig](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_setdevicezonemasterconfig

Last update: **2021/01/06 14:58**