

Slave Control API	1
.....	1
BS2Rs485SlaveDevice	1
BS2Rs485SlaveDeviceEX	1

Slave Control API

RS485

- [BS2_GetSlaveDevice](#): RS485
- [BS2_SetSlaveDevice](#): CoreStation RS485
- [BS2_GetSlaveExDevice](#): CoreStation RS485
- [BS2_SetSlaveExDevice](#): CoreStation RS485

SDK가

가

BS2Rs485SlaveDevice

```
typedef struct {
    uint32_t deviceID;
    uint16_t deviceType;
    uint8_t enableOSDP;
    uint8_t connected;
} BS2Rs485SlaveDevice;
```

1. *deviceID*
2. *deviceType*
3. *enableOSDP*
flag
4. *connected*
가 flag

BS2Rs485SlaveDeviceEX

```
typedef struct {
    uint32_t deviceID;
    uint16_t deviceType;
    uint8_t enableOSDP;
```

```

uint8_t connected;
uint8_t channelInfo;
uint8_t reserved[3];
} BS2Rs485SlaveDeviceEX;

```

1. *deviceId*

.

2. *deviceType*

.

3. *enableOSDP*

flag

.

4. *connected*

가

flag

.

5. *channelInfo*

Channel

.

6. *reserved*

.

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:slave_control_api&rev=1503963103

Last update: **2017/08/29 08:31**