

Table of Contents

BS2_GetAllLiftLockUnlockZone	1
Declaration	1
Parameter	1
Return Value	1
함께 보기	1

[Zone Control API](#) > [BS2_GetAllLiftLockUnlockZone](#)

BS2_GetAllLiftLockUnlockZone

[+ 2.7.0] Retrieves all Lift Lock/Unlock zones.

Declaration

```
#include "BS_API.h"

int BS2_GetAllLiftLockUnlockZone(void* context, uint32_t deviceId,
BS2LiftLockUnlockZone** zoneObj, uint32_t* numZone);
```

[See BS2LiftLockUnlockZone Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *zoneObj* : Lift lock/unlock zone list pointer
- [Out] *numZone* : Number of Lift lock/unlock zone list

NOTE

The *zoneObj* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

함께 보기

[BS2_GetLiftLockUnlockZone](#)
[BS2_GetLiftLockUnlockZoneStatus](#)
[BS2_GetAllLiftLockUnlockZoneStatus](#)
[BS2_SetLiftLockUnlockZone](#)

[BS2_SetLiftLockUnlockZoneAlarm](#)
[BS2_RemoveLiftLockUnlockZone](#)
[BS2_RemoveAllLiftLockUnlockZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getallliftlockunlockzone

Last update: **2020/07/29 11:19**