

Table of Contents

BS2_GetDeviceZoneMasterConfig	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_GetDeviceZoneMasterConfig](#)

BS2_GetDeviceZoneMasterConfig

Retrieves the zone master config of the Ethernet zone.

Supported devices

BioStation 2 (1.5.0 only)
BioStatioin A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_GetDeviceZoneMasterConfig(void* context, BS2_DEVICE_ID deviceId,
BS2DeviceZoneMasterConfig* config);
```

[See BS2DeviceZoneMasterConfig Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *config* : Zone master config pointer

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_SetDeviceZoneMasterConfig](#)
[BS2_RemoveDeviceZoneMasterConfig](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getdevicezonemasterconfig

Last update: **2021/01/06 15:08**