


Table of Contents

BS2_GetLiftLockUnlockZoneStatus	1
Declartion	1
Parameter	1
Return Value	1
함께 보기	2

 **Fix Me!** This page is not fully translated, yet. Please help completing the translation.
(remove this paragraph once the translation is finished)

[Zone Control API](#) > [BS2_GetLiftLockUnlockZoneStatus](#)

BS2_GetLiftLockUnlockZoneStatus

[+ 2.7.0] Retrieves the status of selected Lift Lock/Unlock zones.

Declartion

```
#include "BS_API.h"

int BS2_GetLiftLockUnlockZoneStatus(void* context, uint32_t deviceId,
uint32_t* zoneIds, uint32_t zoneIdCount, BS2ZoneStatus** zoneStatusObj,
uint32_t* numZoneStatus);
```

[See BS2ZoneStatus Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zoneIds* : List of Lift lock/unlock zone ID
- [In] *zoneIdCount* : Size of Lift lock/unlock zone id list
- [Out] *zoneStatusObj* : Zone status list pointer
- [Out] *numZoneStatus* : Number of zone status list

NOTE

The *zoneStatusObj* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

함께 보기

- [BS2_GetLiftLockUnlockZone](#)
- [BS2_GetAllLiftLockUnlockZone](#)
- [BS2_GetAllLiftLockUnlockZoneStatus](#)
- [BS2_SetLiftLockUnlockZone](#)
- [BS2_SetLiftLockUnlockZoneAlarm](#)
- [BS2_RemoveLiftLockUnlockZone](#)
- [BS2_RemoveAllLiftLockUnlockZone](#)

From:
<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:
http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getliftlockunlockzonestatus&rev=1595989284

Last update: **2020/07/29 11:21**