

# Table of Contents

<b>BS2_RemoveAllDeviceZone</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_RemoveAllDeviceZone](#)

---

## BS2\_RemoveAllDeviceZone

Removes all Ethernet zones.

### Declaration

```
#include "BS_API.h"

int BS2_RemoveAllDeviceZone(void* context, uint32_t deviceId);
```

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetDeviceZone](#)  
[BS2\\_GetAllDeviceZone](#)  
[BS2\\_SetDeviceZone](#)  
[BS2\\_RemoveDeviceZone](#)  
[BS2\\_SetIntrusionAlarmZoneAlarm](#)  
[BS2\\_SetDeviceZoneAlarm](#)

From:  
<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:  
[http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2\\_removealldevicezone&rev=1504601942](http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_removealldevicezone&rev=1504601942)

Last update: **2017/09/05 17:59**