


Table of Contents

BS2_RemoveAllLiftLockUnlockZone	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

 **This page is not fully translated, yet. Please help completing the translation.**
(remove this paragraph once the translation is finished)

[Zone Control API](#) > [BS2_RemoveAllLiftLockUnlockZone](#)

BS2_RemoveAllLiftLockUnlockZone

[+ 2.7.0] Removes all Lift Lock/Unlock zones.

Declaration

```
#include "BS_API.h"

int BS2_RemoveAllLiftLockUnlockZone(void* context, uint32_t deviceId);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetLiftLockUnlockZone](#)
[BS2_GetAllLiftLockUnlockZone](#)
[BS2_GetLiftLockUnlockZoneStatus](#)
[BS2_GetAllLiftLockUnlockZoneStatus](#)
[BS2_SetLiftLockUnlockZone](#)
[BS2_SetLiftLockUnlockZoneAlarm](#)
[BS2_RemoveLiftLockUnlockZone](#)

From:
<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:
http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_removeallliftlockunlockzone&rev=1595989939

Last update: **2020/07/29 11:32**