

# Table of Contents

|  |   |
|--|---|
| <b>BS2_RemoveDeviceZoneAGEntranceLimit</b> ..... | 1 |
| Declaration .....                                | 1 |
| Parameter .....                                  | 1 |
| Return Value .....                               | 1 |
| See Also .....                                   | 1 |

[Zone Control API](#) > [BS2\\_RemoveDeviceZoneAGEntranceLimit](#)

---

## BS2\_RemoveDeviceZoneAGEntranceLimit

Removes selected Ethernet access group entrance limit.

### Declaration

```
#include "BS_API.h"

int BS2_RemoveDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId, const BS2_ZONE_ID* Ids, uint32_t IdCount);
```

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of Device zone IDs to remove
- [In] *IdCount* : Number of Device zones to remove

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetAccessGroupEntranceLimit](#)  
[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)  
[BS2\\_SetDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_removedevicezoneagentrancelimit&rev=1504685328](http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_removedevicezoneagentrancelimit&rev=1504685328)

Last update: **2017/09/06 17:08**