

## Table of Contents

<b><i>BS2_SetDesFireCardConfigEx</i></b> .....	1
Declaration .....	1
Paramter .....	1
Return Value .....	1
See Also .....	1

Configuration API > [BS2\\_SetDesFireCardConfigEx](#)

## BS2\_SetDesFireCardConfigEx

[+ V2.6.4] Sets DesFire advanced configuration in the device.

### Declaration

```
#include "BS_API.h"

int BS2_SetDesFireCardConfigEx(void* context, uint32_t deviceId,
BS2DesFireCardConfigEx* config);
```

[See Structure BS2DesFireCardConfigEx](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *config* : Pointer of DesFire advanced configuration

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetDesFireCardConfigEx](#)

From:

<http://kb.supremainc.com/bs2sdk> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_setdesfirecardconfigex&rev=1581987932](http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdesfirecardconfigex&rev=1581987932)

Last update: **2020/02/18 10:05**