

Table of Contents

BS2_SetDeviceZoneAlarm	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_SetDeviceZoneAlarm](#)

BS2_SetDeviceZoneAlarm

Configures the alarm status of the Ethernet zone.

Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneAlarm(void* context, BS2_DEVICE_ID deviceId, uint8_t
alarmed, BS2_ZONE_ID* zoneIds, uint32_t zoneIdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *alarmed* : Whether the alarm has been triggered or not
- [In] *zoneIds* : List of Device zone IDs
- [In] *zoneIdCount* : Number of Device zone IDs

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZone](#)

[BS2_GetAllDeviceZone](#)

[BS2_SetDeviceZone](#)

[BS2_RemoveDeviceZone](#)

[BS2_RemoveIntrusionAlarmZone](#)

[BS2_RemoveAllDeviceZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_setdevicezonealarm&rev=1504602028

Last update: **2017/09/05 18:00**

