

Table of Contents

BS2_SetIntrusionAlarmZone	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_SetIntrusionAlarmZone](#)

BS2_SetIntrusionAlarmZone

Configures an Intrusion Alarm zone.

Declaration

```
#include "BS_API.h"

int BS2_SetIntrusionAlarmZone(void* context, uint32_t deviceId,
BS2IntrusionAlarmZoneBlob* zones, uint32_t zoneCount);
```

[See BS2IntrusionAlarmZoneBlob Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zones* : Intrusion alarm zone list
- [In] *zoneCount* : Number of intrusion alarm zone list

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetIntrusionAlarmZone](#)
[BS2_GetIntrusionAlarmZoneStatus](#)
[BS2_GetAllIntrusionAlarmZoneStatus](#)
[BS2_SetIntrusionAlarmZoneAlarm](#)
[BS2_RemoveIntrusionAlarmZone](#)
[BS2_RemoveAllIntrusionAlarmZone](#)
[BS2_SetIntrusionAlarmZoneArm](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setintrusionalarmzone

Last update: **2017/09/05 14:07**