

Table of Contents

BS2_SetLiftAlarm	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Lift Control API](#) > [BS2_SetLiftAlarm](#)

BS2_SetLiftAlarm

Configures the alarm status of the lift.

Declaration

```
#include "BS_API.h"

int BS2_SetLiftAlarm(void* context, uint32_t deviceId, BS2_LIFT_ALARM_FLAG
flag, BS2_LIFT_ID* liftIds, uint32_t liftIdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *flag* : Lift alarm flag
- [In] *liftIds* : List of lift IDs to retrieve
- [In] *liftIdCount* : Number of lifts

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetLift](#)
[BS2_GetAllLift](#)
[BS2_GetLiftStatus](#)
[BS2_GetAllLiftStatus](#)
[BS2_SetLift](#)
[BS2_RemoveLift](#)
[BS2_RemoveAllLift](#)
[BS2_ReleaseFloor](#)
[BS2_ActivateFloor](#)
[BS2_DeActivateFloor](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setliftalarm

Last update: **2017/06/28 10:49**