

Table of Contents

BS2_SetScheduledLockUnlockZoneAlarm	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_SetScheduledLockUnlockZoneAlarm](#)

BS2_SetScheduledLockUnlockZoneAlarm

Configures the alarm status of the Scheduled Lock/Unlock zone.

Declaration

```
#include "BS_API.h"

int BS2_SetScheduledLockUnlockZoneAlarm(void* context, uint32_t deviceId,
uint8_t alarmed, uint32_t* zoneIds, uint32_t zoneIdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *alarmed* : Whether the alarm has been triggered or not
- [In] *zoneIds* : List of Scheduled Lock/Unlock zone IDs
- [In] *zoneIdCount* : Number of Scheduled Lock/Unlock zone IDs

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetScheduledLockUnlockZone](#)
[BS2_GetAllScheduledLockUnlockZone](#)
[BS2_GetScheduledLockUnlockZoneStatus](#)
[BS2_GetAllScheduledLockUnlockZoneStatus](#)
[BS2_SetScheduledLockUnlockZone](#)
[BS2_RemoveScheduledLockUnlockZone](#)
[BS2_RemoveAllScheduledLockUnlockZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setscheduledlockunlockzonealarm

Last update: **2016/02/17 14:36**

