

Table of Contents

USB Exported Control API 1

USB Exported Control API

This API allows to control/manage USB Exported.

- [BS2_GetUserListFromDir](#): Gets the enrolled user ID list from storage path in device.
- [BS2_GetUserInfosFromDir](#): Gets the user information of the given user ID from storage path in device.
- [BS2_GetUserInfosExFromDir](#): Gets the user information of the given user ID from storage path in device. (Including Job, phrase after v2.4)
- [BS2_GetLogFromDir](#): Gets certain amount of logs from storage path in device.
- [BS2_GetLogBlobFromDir](#): Gets certain amount of logs based on the event mask from storage path in device.
- [BS2_GetFilteredLogFromDir](#): Gets filtered logs from storage path in device.

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk./doku.php?id=en:use_exported_control_api&rev=1540857845

Last update: **2018/10/30 09:04**