

BS2_ReleaseFloor 1

..... 1

..... 1

..... 1

..... 1

BS2_ReleaseFloor

Floor

```
#include "BS_API.h"

int BS2_ReleaseFloor(void* context, uint32_t deviceId, BS2_FLOOR_FLAG flag,
BS2_LIFT_ID liftID, uint16_t* floorIndexs, uint8_t floorIndexCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *flag* : Floor
- [In] *liftID* : lift ID
- [In] *floorIndexs* : floor Index
- [In] *floorIndexCount* : floor Index

BS_SDK_SUCCESS , 가

- [BS2_GetLift](#)
- [BS2_GetAllLift](#)
- [BS2_GetLiftStatus](#)
- [BS2_GetAllLiftStatus](#)
- [BS2_SetLift](#)
- [BS2_SetLiftAlarm](#)
- [BS2_RemoveLift](#)
- [BS2_RemoveAllLift](#)
- [BS2_ActivateFloor](#)
- [BS2_DeActivateFloor](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_releasefloor

Last update: **2017/06/28 11:41**