

BS2_RemoveAllDeviceZone 1
..... 1
..... 1
..... 1
..... 1

BS2_RemoveAllDeviceZone

Ethernet .

```
#include "BS_API.h"

int BS2_RemoveAllDeviceZone(void* context, uint32_t deviceId);
```

- [In] *context* : Context
- [In] *deviceId* :

BS_SDK_SUCCESS , 가

- [BS2_GetDeviceZone](#)
- [BS2_GetAllDeviceZone](#)
- [BS2_SetDeviceZone](#)
- [BS2_RemoveDeviceZone](#)
- [BS2_SetIntrusionAlarmZoneAlarm](#)
- [BS2_SetDeviceZoneAlarm](#)

From:
<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:
http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_removealldevicezone&rev=1504533825

Last update: **2017/09/04 23:03**