

BS2_SetDeviceZone 1
..... 1
..... 1
..... 1
..... 1

BS2_SetDeviceZone

Ethernet

```
#include "BS_API.h"

 
int BS2_SetDeviceZone(void* context, BS2_DEVICE_ID deviceId, const
BS2DeviceZone* deviceZones, uint32_t deviceZoneCount);
```

[BS2DeviceZone](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *deviceZones* : device zone
- [In] *deviceZoneCount* : device zone

BS_SDK_SUCCESS , 가

- [BS2_GetDeviceZone](#)
- [BS2_GetAllDeviceZone](#)
- [BS2_RemoveDeviceZone](#)
- [BS2_RemoveAllDeviceZone](#)
- [BS2_SetDeviceZoneAlarm](#)



From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_setdevicezone&rev=1504530665

Last update: **2017/09/04 22:11**