

BS2_SetSlaveBaudrate 1
..... 1
..... 1
..... 1

BS2_SetSlaveBaudrate

[+ 2.9.8]

RS-485
RS-485

```
#include "BS_API.h"
```

```
int BS2_SetSlaveBaudrate(IntPtr context, UInt32 deviceId, UInt32 slaveId,
                          UInt32 baudrate);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *slaveId* :
- [In] *baudrate* : RS-485

BS_SDK_SUCCESS , 가

From:
<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:
http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_setslavebaudrate

Last update: **2024/10/24 15:15**