

**BS2\_SetSlaveBaudrate** ..... 1  
..... 1  
..... 1  
..... 1

## BS2\_SetSlaveBaudrate

[ + 2.9.8 ]

RS-485  
RS-485

```
#include "BS_API.h"
```

```
int BS2_SetSlaveBaudrate(IntPtr context, UInt32 deviceId, UInt32 slaveId, UInt32 baudrate);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *slaveId* :
- [In] *baudrate* : RS-485

BS\_SDK\_SUCCESS , 가

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[https://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2\\_setslavebaudrate](https://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_setslavebaudrate)

Last update: **2024/10/24 15:15**