

2.5.0 ..... 1

# 2.5.0

2017-09-25

- SEOS (Elite Key, RF )
- CoreStation , P2
- Intrusion Alarm Zone
- Ethernet Zone
- USB Export
- 가

## 1. SEOS (Elite Key, RF ) iClass SEOS

- [BS2\\_GetCardConfigEx](#) 가
- [BS2\\_SetCardConfigEx](#) 가
- [BS2CardConfigEx](#) 가

## 2. CoreStation Controller CoreStation Slave . CoreStation Master

- Controller UI CoreStation BioStar
- [BS2\\_GetSlaveExDevice](#) 가
- [BS2\\_SetSlaveExDevice](#) 가
- [BS2Rs485SlaveDeviceEX](#) 가

## 3. Intrusion Alarm Zone

- 가 , , Video
- (biostar1.X) , 3rd party alarm / , Video
- Visual map

```

* [[BS2_GetIntrusionAlarmZone]] 가
* [[BS2_GetIntrusionAlarmZoneStatus]] 가
* [[BS2_SetIntrusionAlarmZone]] 가
* [[BS2_SetIntrusionAlarmZoneAlarm]] 가
* [[BS2_RemoveIntrusionAlarmZone]] 가
* [[BS2_SetIntrusionAlarmZoneArm]] 가
* [[Configuration API#BS2IntrusionAlarmZoneBlob]] 가

```

4. Ethernet Zone Zone Master BioStar V2.x 가 가  
 (Master ↔ Member) Ethernet TCP Zone 1.x  
 Entrance Limit, Fire Alarm Zone

- [BS2\\_GetDeviceZone](#) 가
- [BS2\\_SetDeviceZone](#) 가
- [BS2\\_RemoveDeviceZone](#) 가
- [BS2\\_SetDeviceZoneAlarm](#) 가
- [BS2DeviceZoneConfig](#) 가

5. USB Export USB  
 Export / Import T&A ( ) BioStar  
 가 USB , USB  
 T&A USB , USB

- [BS2\\_GetUserListFromDir](#) 가
- [BS2\\_GetUserInfosFromDir](#) 가
- [BS2\\_GetLogFromDir](#) 가

5. 가 SDK 가

\* [BS2\\_GetFilteredLogSinceEventId](#) 가

1. BS2\_ScanFingerprint BS2\_ScanFingerprintEx 가가  
 outQuality 가가

```
#include "BS_API.h"

int BS2_ScanFingerprintEx(void* context, uint32_t deviceId, BS2Fingerprint*
finger, uint32_t templateIndex, uint32_t quality, uint8_t templateFormat,
uint32_t* outQuality, OnReadyToScan ptrReadyToScan);
```

From:  
<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**  
 Permanent link:  
[http://kb.supremainc.com/bs2sdk/doku.php?id=ko:release\\_note\\_250&rev=1508216290](http://kb.supremainc.com/bs2sdk/doku.php?id=ko:release_note_250&rev=1508216290)  
 Last update: **2017/10/17 13:58**