

BS2_GetDeviceZone 1

..... 1

..... 1

..... 1

..... 1

..... 2

BS2_GetDeviceZone

Ethernet 가 .

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_GetDeviceZone(void* context, BS2_DEVICE_ID deviceId, const
BS2_DEVICE_ZONE_TABLE_ID* Ids, uint32_t IdCount, BS2DeviceZone**
deviceZoneObj, uint32_t* numDeviceZone);
```

BS2DeviceZone

- [In] *context* : Context
- [In] *deviceId* :
- [In] *Ids* : 가 device zone id
- [In] *IdCount* : device zone id
- [Out] *deviceZoneObj* : device zone
- [Out] *numDeviceZone* : device zone

zoneObj	BS2_ReleaseObject
---------	-------------------

BS_SDK_SUCCESS , 가

BS2_GetAllDeviceZone
BS2_SetDeviceZone
BS2_RemoveDeviceZone
BS2_RemoveAllDeviceZone
BS2_SetDeviceZoneAlarm

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getdevicezone

Last update: **2018/03/22 10:45**