

Table of Contents

BS2_GetAccessGroup

Declaration

Parameter

Return Value

Seel Also

..... 1

..... 1

..... 1

..... 1

..... 1

[Access Control API](#) > [BS2_GetAccessGroup](#)

BS2_GetAccessGroup

Retrieves selected access groups.

Declaration

```
#include "BS_API.h"

int BS2_GetAccessGroup(void* context, uint32_t deviceId, uint32_t*
accessGroupIds, uint32_t accessGroupIdCount, BS2AccessGroup**
accessGroupObj, uint32_t* numAccessGroup);
```

[See BS2AccessGroup Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *accessGroupIds* : List of access group IDs to retrieve
- [In] *accessGroupIdCount* : Number of access groups to retrieve
- [Out] *accessGroupObj* : Access group list pointer
- [Out] *numAccessGroup* : Number of access groups

NOTE

The *accessGroupObj* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetAllAccessGroup](#)

[BS2_SetAccessGroup](#)
[BS2_RemoveAccessGroup](#)
[BS2_RemoveAllAccessGroup](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getaccessgroup

Last update: **2017/03/01 18:03**