

# Table of Contents

- BS2\_GetAllFireAlarmZoneStatus** ..... 1
- Declaration ..... 1
- Parameter ..... 1
- Return Value ..... 1
- See Also ..... 1

[Zone Control API](#) > [BS2\\_GetAllFireAlarmZoneStatus](#)

---

## BS2\_GetAllFireAlarmZoneStatus

Retrieves the status of all Fire Alarm zones.

### Declaration

```
#include "BS_API.h"

int BS2_GetAllFireAlarmZoneStatus(void* context, uint32_t deviceId,
BS2ZoneStatus** zoneStatusObj, uint32_t* numZoneStatus);
```

[See BS2ZoneStatus Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *zoneStatusObj* : Zone status list pointer
- [Out] *numZoneStatus* : Number of zone status records

#### NOTE

The *zoneStatusObj* variable needs to return the memory to the system by the [BS2\\_ReleaseObject](#) function after being used.

### Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetFireAlarmZone](#)  
[BS2\\_GetAllFireAlarmZone](#)  
[BS2\\_GetFireAlarmZoneStatus](#)  
[BS2\\_SetFireAlarmZone](#)

[BS2\\_SetFireAlarmZoneAlarm](#)  
[BS2\\_RemoveFireAlarmZone](#)  
[BS2\\_RemoveAllFireAlarmZone](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_getallfirealarmzonestatus](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getallfirealarmzonestatus)

Last update: **2016/07/12 10:19**