

Table of Contents

BS2_GetAntiPassbackZone

Declaration

Parameter

Return Value

See Also

..... 1

..... 1

..... 1

..... 1

..... 1

BS2_GetAntiPassbackZone

Retrieves selected Anti Passback zones.

Declaration

```
#include "BS_API.h"

int BS2_GetAntiPassbackZone(void* context, uint32_t deviceId, uint32_t* zoneIds, uint32_t zoneIdCount, BS2AntiPassbackZone** zoneObj, uint32_t* numZone);
```

[See BS2AntiPassbackZone Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zoneIds* : List of Anti Passback zone IDs to retrieve
- [In] *zoneIdCount* : Size of Anti Passback zone ID list
- [Out] *zoneObj* : Anti Passback zone list pointer
- [Out] *numZone* : Number of Anti Passback zones

NOTE

The zoneObj variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetAllAntiPassbackZone](#)

[BS2_SetAntiPassbackZone](#)
[BS2_RemoveAntiPassbackZone](#)
[BS2_RemoveAllAntiPassbackZone](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getantipassbackzone

Last update: **2016/07/12 10:01**