

# Table of Contents

<b>BS2_GetDesFireCardConfigEx</b> .....	1
Declaration .....	1
Paramter .....	1
Return Value .....	1
See Also .....	1

[Configuration API](#) > [BS2\\_GetDesFireCardConfigEx](#)

---

## BS2\_GetDesFireCardConfigEx

[+ V2.6.4] Retrieves DesFire advanced configuration from the device.

### Declaration

```
#include "BS_API.h"

int BS2_GetDesFireCardConfigEx(void* context, uint32_t deviceId,
BS2DesFireCardConfigEx* config);
```

[See Structure BS2DesFireCardConfigEx](#)

### Paramter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *config* : Pointer of DesFire advanced setting

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_SetDesFireCardConfigEx](#)

From:  
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:  
[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_getdesfirecardconfigex&rev=1581988044](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getdesfirecardconfigex&rev=1581988044)

Last update: **2020/02/18 10:07**