

Table of Contents

BS2_GetDeviceZone

Supported devices

Declaration

Parameter

Return Value

See Also

.....

.....

.....

.....

.....

.....

1

1

1

1

1

2

BS2_GetDeviceZone

Retrieves selected Ethernet zones.

Supported devices

BioStation 2 (1.5.0 only)

BioStation A2 (1.4.0 only)

BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_GetDeviceZone(void* context, BS2_DEVICE_ID deviceId, const
BS2_DEVICE_ZONE_TABLE_ID* Ids, uint32_t IdCount, BS2DeviceZone**
deviceZoneObj, uint32_t* numDeviceZone);
```

[See BS2DeviceZone Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of Device zone IDs to retrieve
- [In] *IdCount* : Size of Device zone ID list
- [Out] *deviceZoneObj* : Device zone list pointer
- [Out] *numDeviceZone* : Number of Device zones

NOTE

The zoneObj variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetAllDeviceZone](#)

[BS2_SetDeviceZone](#)

[BS2_RemoveDeviceZone](#)

[BS2_RemoveAllDeviceZone](#)

[BS2_SetDeviceZoneAlarm](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getdevicezone

Last update: **2018/03/22 10:59**