

# Table of Contents

<b>BS2_GetDoor</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Door Control API](#) > [BS2\\_GetDoor](#)

---

## BS2\_GetDoor

Retrieves selected doors.

### Declaration

```
#include "BS_API.h"

int BS2_GetDoor(void* context, uint32_t deviceId, uint32_t* doorIds,
uint32_t doorIdCount, BS2Door** doorObj, uint32_t* numDoor);
```

[See BS2Door Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *doorIds* : List of door IDs to retrieve
- [In] *doorIdCount* : Number of doors to retrieve
- [Out] *doorObj* : Door list pointer
- [Out] *numDoor* : Number of doors

#### NOTE

The *doorObj* variable needs to return the memory to the system by the [BS2\\_ReleaseObject](#) function after being used.

### Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetAllDoor](#)  
[BS2\\_GetDoorStatus](#)

BS2\_GetAllDoorStatus  
BS2\_SetDoor  
BS2\_SetDoor  
BS2\_SetDoorAlarm  
BS2\_RemoveDoor  
BS2\_RemoveAllDoor  
BS2\_ReleaseDoor  
BS2\_LockDoor  
BS2\_UnlockDoor

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_getdoor](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getdoor)

Last update: **2017/03/01 18:04**