

# Table of Contents

<b>BS2_GetFacilityCodeConfig</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Configuration API](#) > [BS2\\_GetFacilityCodeConfig](#)

---

## BS2\_GetFacilityCodeConfig

[+ 2.9.9] Get the BS2FacilityCode used as an authentication code when the OSDP connection between the Door Interface (DI-24) and the master device is lost.

### Declaration

```
#include "BS_API.h"

int BS2_GetFacilityCodeConfig(void* context, BS2_DEVICE_ID deviceId,
BS2FacilityCodeConfig* config);
```

[See BS2FacilityCodeConfig Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device Identifier
- [Out] *config* : Pointer to store credentials BS2FacilityCodeConfig

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned. If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_SetFacilityCodeConfig](#)

From:  
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:  
[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_getfacilitycodeconfig](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getfacilitycodeconfig)

Last update: **2025/06/11 17:00**