

Table of Contents

BS2_GetLiftLockUnlockZone	1
Parameter	1
Parameter	1
Return Value	1
See Also	1

BS2_GetLiftLockUnlockZone

[+ 2.7.0] Retrieves selected Lift Lock/Unlock zones.

Parameter

```
#include "BS_API.h"

int BS2_GetLiftLockUnlockZone(void* context, uint32_t deviceId, uint32_t* zoneIds, uint32_t zoneIdCount, BS2LiftLockUnlockZone** zoneObj, uint32_t* numZone);
```

[See BS2LiftLockUnlockZone Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zoneIds* : List of Lift Lock/Unlock zone ID to retrieve
- [In] *zoneIdCount* : Size of Lift lock/unlock zone ID list
- [Out] *zoneObj* : Lift lock/unlock zone list pointer
- [Out] *numZone* : Number of Lift lock/unlock zone list

NOTE

The *zoneObj* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetAllLiftLockUnlockZone](#)

BS2_GetLiftLockUnlockZoneStatus
BS2_GetAllLiftLockUnlockZoneStatus
BS2_SetLiftLockUnlockZone
BS2_SetLiftLockUnlockZoneAlarm
BS2_RemoveLiftLockUnlockZone
BS2_RemoveAllLiftLockUnlockZone

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getliftlockunlockzone

Last update: **2020/07/29 11:17**