

# Table of Contents

<b>BS2_GetRS485ConfigExDynamic</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Configuration API](#) > [BS2\\_GetRS485ConfigExDynamic](#)

---

## BS2\_GetRS485ConfigExDynamic

[+ 2.9.9] Gets the RS485 network setting information for CoreStation.

### Declaration

```
#include "BS_API.h"

int BS2_GetRS485ConfigExDynamic(void* context, uint32_t deviceId,
BS2Rs485ConfigEXDynamic* config);
```

Supported Devices: CoreStation 20(CS-20, CS-20P), Door Interface(DI-24)

[See BS2Rs485ConfigEXDynamic Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device Identifier
- [Out] *config* : Pointer to store RS485 network setting information

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned. If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_SetRS485ConfigExDynamic](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_getrs485configexdynamic](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getrs485configexdynamic)

Last update: **2025/06/12 09:40**