

# Table of Contents

<b>BS2_GetStatusConfig</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1

[Configuration API](#) > [BS2\\_GetStatusConfig](#)

---

## BS2\_GetStatusConfig

Retrieves LED and buzzer settings from the device.

### Declaration

```
#include "BS_API.h"

int BS2_GetStatusConfig(void* context, uint32_t deviceId, BS2StatusConfig* config);
```

[See BS2StatusConfig Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *config* : LED, buzzer configurations pointer

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_getstatusconfig](http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getstatusconfig)

Last update: **2017/06/28 11:06**