

Table of Contents

BS2_GetUserInfosFromDir	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

User Management API > [BS2_GetUserInfosFromDir](#)

BS2_GetUserInfosFromDir

Gets the user information of the given user ID from storage path in device.

Declaration

```
#include "BS_API.h"

int BS2_GetUserInfosFromDir(void* context, const char* szDir, char* uids,
uint32_t uidCount, BS2UserBlob* userBlob);
```

[See BS2UserBlob Structure](#)

Parameter

- [In] *context* : Context
- [In] *szDir* : Storage path in device
- [In] *uids* : User ID list trying to get
- [In] *uidCount* : Number of user ID
- [Out] *userBlob* : Pointer to store the user information

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_AllocateUsbContext](#)
[BS2_ReleaseUsbContext](#)
[BS2_GetUserDatabaseInfoFromDir](#)
[BS2_GetUserListFromDir](#)
[BS2_GetUserDatasFromDir](#)
[BS2_GetUserInfosExFromDir](#)
[BS2_GetUserDatasExFromDir](#)
[BS2_GetLogFromDir](#)
[BS2_GetLogBlobFromDir](#)

BS2_GetFilteredLogFromDir

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getuserinfosfromdir

Last update: **2022/04/21 11:13**