

Table of Contents

BS2_GetUserListFromDir	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

User Management API > [BS2_GetUserListFromDir](#)

BS2_GetUserListFromDir

Gets enrolled user ID as array from storage path in device.

Declaration

```
#include "BS_API.h"

int BS2_GetUserListFromDir(void* context, const char* szDir, char** uidsObj,
uint32_t* numUid, IsAcceptableUserID ptrIsAcceptableUserID);
```

Parameter

- [In] *context* : Context
- [Out] *szDir* : Storage path in device
- [Out] *uidsObjs* : Pointer to store the user ID list's address
- [Out] *numUid* : Number of users
- [In] *ptrIsAcceptableUserID* : TBD

NOTE

The *uidsObjs* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetUserInfosFromDir](#)

[BS2_GetUserInfosExFromDir](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_getuserlistfromdir

Last update: **2017/09/05 17:34**