

Table of Contents

BS2_ReleaseFloor	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Lift Control API](#) > [BS2_ReleaseFloor](#)

BS2_ReleaseFloor

Releases the activate/deactivate flag of the lift status. This initializes the priorities set to the lift.

Declaration

```
#include "BS_API.h"

int BS2_ReleaseFloor(void* context, uint32_t deviceId, BS2_FLOOR_FLAG flag,
BS2_LIFT_ID liftID, uint16_t* floorIndexs, uint8_t floorIndexCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *flag* : Priority of the floor to release
- [In] *liftID* : Lift ID
- [In] *floorIndexs* : List of floor indexes
- [In] *floorIndexCount* : Number of floor indexes

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetLift](#)
[BS2_GetAllLift](#)
[BS2_GetLiftStatus](#)
[BS2_GetAllLiftStatus](#)
[BS2_SetLift](#)
[BS2_SetLiftAlarm](#)
[BS2_RemoveLift](#)
[BS2_RemoveAllLift](#)
[BS2_ActivateFloor](#)
[BS2_DeActivateFloor](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_releasefloor

Last update: **2017/06/28 10:51**